

IMPORTANT THINGS TO KNOW



OUR PRODUCT RANGE - WALL PAINTS

HOW TO PAINT AN EXTERIOR WALL



Always follow the instructions on the product label for best results.



Preparation and correct product application are important.



There are no short-cuts. Always follow the correct drying time recommendations.



High moisture and alkaline (salt) content in a wall reacts with paint and will cause paint failure if not properly treated.



Keep the room well ventilated when using an oil-based/solvent based paint.

HANDY PAINTING TIPS



Clean your equipment used for PVA with soapy water after use. Work the bristles with your hand.



Clean your equipment used for oil-based paint with Mineral Turpentine after use.



Use correct safety equipment for your own protection e.g. safety glasses, gloves and protective clothing.



For a Parapet wall, apply NEO Salt Stop on top of the wall and 50mm over the edges on all sides of the wall.



For serious damp problems, please phone our technical helpline for support.
Tel: +264 61 384 724

PRODUCT NAME		WATER-BASED			OIL-BASED			
		NEO DUR ACRYLIC PVA	NEO MULTI DUR PVA	AURORA	NEO GLOSS ACRYLIC	NEO DUR HIGH GLOSS	NEO DUR EGG-SHELL	NEO SILK
AREAS	INTERIOR	X	X	X	X	X	X	X
	EXTERIOR	X	X	X	X	X		
FINISH	HIGH-GLOSS				X	X		
	SILKY SHEEN						X	X
	SEMI-MAT	X						
	MATT		X	X				
SURFACE	CEILINGS	X	X	X	X	X	X	X
	CONCRETE	X	X	X	X	X	X	X
	DOORS	X			X	X	X	X
	FIBRE CEMENT	X	X	X	X	X	X	X
	FURNITURE				X	X	X	X
	HARDBOARD	X	X	X	X	X	X	X
	METAL	PRIMED	PRIMED		PRIMED	PRIMED	PRIMED	PRIMED
	WALLS	PRIMED	PRIMED	PRIMED	PRIMED	PRIMED	PRIMED	PRIMED
	WOOD FRAMES	PRIMED	PRIMED		PRIMED	PRIMED	PRIMED	PRIMED
SABS GRADE	1	X						
	2		X			X		

Technical helpline: Tel: +264 61 384 724

WINDHOEK HEAD OFFICE
12 Bell Street, Southern Industry, Windhoek
T: +264 61 384 700

WALVIS BAY REGIONAL OFFICE
Hanna Mupatani Road, Walvis Bay
T: +264 64 204 026

www.neopaints.com [f/NEOpaintsNamibia](https://www.facebook.com/NEOpaintsNamibia)

PA!NTNAM!B!A

EASY STEPS TO PAINT AN EXTERIOR WALL AND WHICH PRODUCTS TO USE.





Painting the exterior walls of your home can give it a fresh and well cared-for look which adds value to your property

A coat of excellence



1


Always start with a clean wall by removing any dust, oil, chemicals or flaking and bubbling paint from the wall with a wire brush. Let the surfaces dry completely.

THINGS YOU WILL NEED



Foundry brush

Hamilton's Scourer Pad

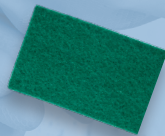

2

If moisture is suspected in the wall, treat the bare cement plaster with **NEO Salt Stop**.

Apply one coat with a general paint brush.

Add: Allow 2 hours to dry.

NOTE: For severe moisture problems contact the technical helpline for assistance.

THINGS YOU WILL NEED



Hamilton's Viva 100mm brush



3

Check the wall for cracks and holes and apply **NEO Bonding Liquid** in all the cavities.

Apply **NEO Repair Paste** to the cracks and scrape off excess paste with a utility scraper.

Larger holes must be filled with 2mm layers until the cracks are filled. Let each layer dry for 1 hour. Use a small piece of 220 grit sandpaper to smooth the areas flush with surface.

THINGS YOU WILL NEED

Hamilton's Scraper



4

New walls:
Prime the wall with **NEO Contractors Premium Primer**. Apply with a roller or brush.

Previously painted walls:
Apply one coat of **NEO Bonding Liquid** with a roller or brush. Allow to dry for a minimum of 4 hours to a maximum of 48 hours.

THINGS YOU WILL NEED



5

BOUNDARY OR PARAPET WALLS

If the wall is a boundary or parapet wall, apply one coat of **NEO Salt Stop** by using a general paint brush or roller.

Apply two coats of **NEO Elastic Waterproofing** on top of the boundary walls with a general paint brush.

Also cover 50mm over the edges on the side of the wall.



6

Finish with 2 coats of any **NEO PVA** Finishing paints of your choice. Choose from **NEO Dur**, **NEO Multi Dur** or **Aurora**.



Hamilton's Sheepskin Roller



MORE HANDY TOOLS



Wire brush



Scraper



Paint Tray



Paint roller



Sand paper



Paint brush



finish