

IMPORTANT THINGS TO KNOW



OUR PRODUCT RANGE - CEMENT FLOOR

HOW TO PAINT AN INTERIOR CEMENT FLOOR



Always follow the instructions on the product label for best results.



Preparation and correct product application are important.



There are no short-cuts. Always follow the correct drying time recommendations.



Keep the room well ventilated when using an oil-based/solvent based paint.

HANDY PAINTING TIPS



Clean your brushes used for floor paint with Mineral Turpentine.



For heavy traffic areas, e.g. garage floors, use NEO Epoxy floor paint.



Use the correct safety equipment for your own safety for e.g. safety glasses, gloves and protective clothing.



For technical questions, please phone our technical helpline for support.
Tel: +264 61 384 724

PRODUCT NAME		NEO FLOOR PAINT	NEO EPOXY FLOOR PAINT
APPLICATION AREAS	INTERIOR	X	X
	EXTERIOR		
	MEDIUM TRAFFIC	X	
	HEAVY TRAFFIC		X
SURFACES	CONCRETE FLOOR	X	X
	CEMENT FLOOR	X	X
	METAL	PRIMED	PRIMED
	WOODEN SUBSTRATES	PRIMED	
PROPERTIES	CHEMICAL RESISTANT		X

Technical helpline: Tel: +264 61 384 724

WINDHOEK HEAD OFFICE
12 Bell Street, Southern Industry, Windhoek
T: +264 61 384 700

WALVIS BAY REGIONAL OFFICE
Hanna Mupatani Road, Walvis Bay
T: +264 64 204 026


www.neopaints.com [f/NEOpaintsNamibia](https://www.facebook.com/NEOpaintsNamibia)

PA!NTNAM!B!A

HANDY TIPS ON HOW TO PAINT AN INTERIOR CEMENT FLOOR AND WHICH PRODUCTS TO USE.



NOTE: INSTRUCTIONS
ONLY APPLICABLE TO
MEDIUM TRAFFIC AREAS

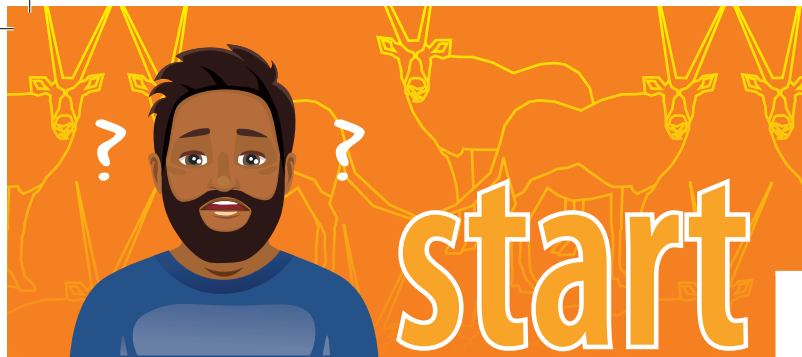

Floors can add a special feature to your home. To repair or apply a new paint coat on a cement surface is easy to achieve.

A coat of excellence



1

Previously painted floors: Remove all loose peeling and blistering paint by means of scraping or sanding the existing coating to matte.

THINGS YOU WILL NEED



Hamilton's Sand It Multi Purpose Roll

Hamilton's Scraper

2

Make sure the surface is dry, solid and free from dust, oil or chemicals.

Sweep the floor properly – do not wash with water.

For oil or chemicals, please phone our Technical helpline for assistance.

THINGS YOU WILL NEED



Hamilton's Deluxe Wooden Broom

3

Check the floor for cracks and holes and apply **NEO Bonding Liquid** in all the cavities

Apply **NEO Repair Paste** to the cracks and scrape off excess paste with a utility scraper.

Larger holes must be filled with 2mm layers until the cracks are filled.

Let each layer dry for 1 hour.

Use a small piece of 220 grit sandpaper to smooth the areas flush with surface.

THINGS YOU WILL NEED



Hamilton's Stainless Steel Scraper 50mm

4

Apply a coat of **NEO Floor Paint** diluted with 10% **NEO Mineral Turpentine** using a paint roller and allow 24 hours drying time.

Apply a second coat **NEO Floor Paint** undiluted and allow 24 hours drying time.

NOTE: Instructions only applicable to medium traffic areas.

This process not suitable for garage or industrial floors.

THINGS YOU WILL NEED



Extension pole



Hamilton's Original Sheepskin Roller 225mm



MORE HANDY TOOLS



Wire brush



Mop or Broom



Masking tape



Paint Tray



Sand paper



Paint Roller



Paint Brush